


A.24 Telai Trimless




design

Carlotta de Bevilacqua




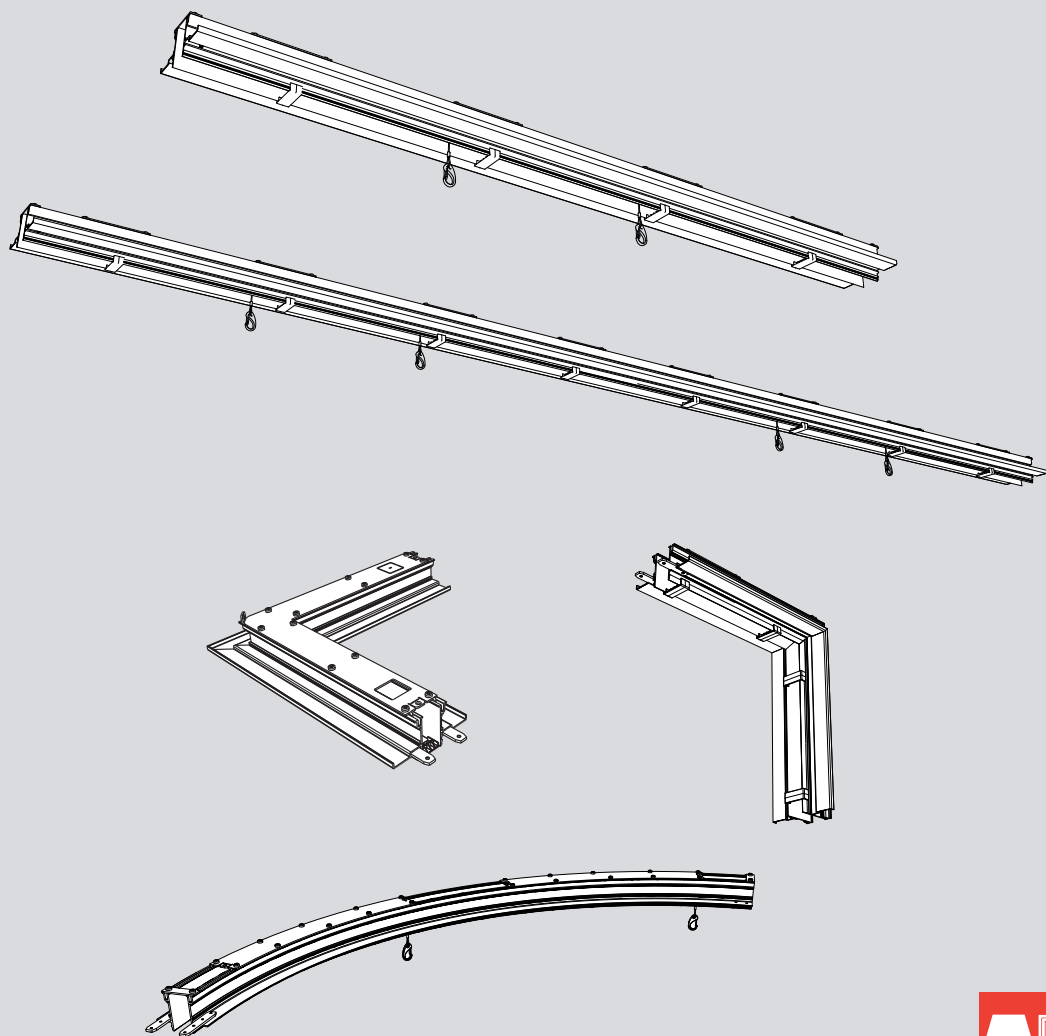





i

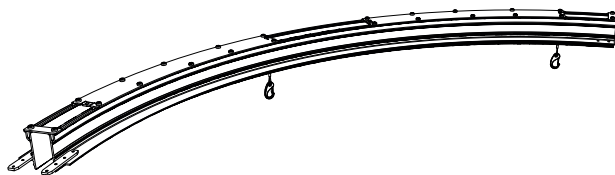
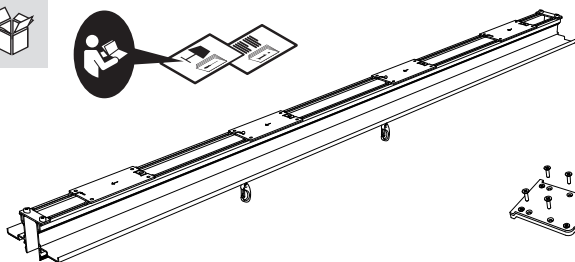


750x90
750x45
561x90
561x60

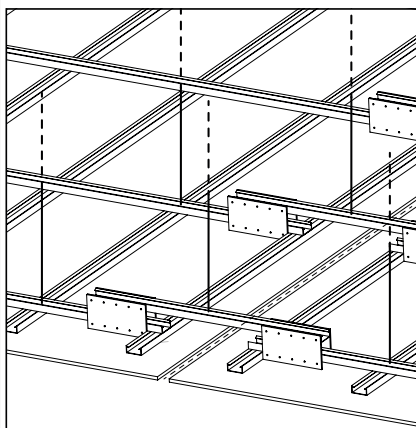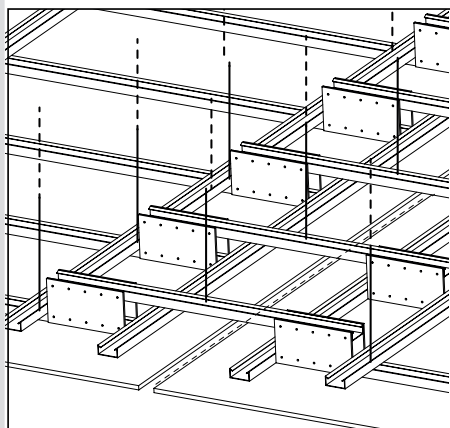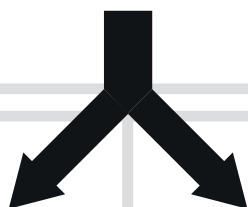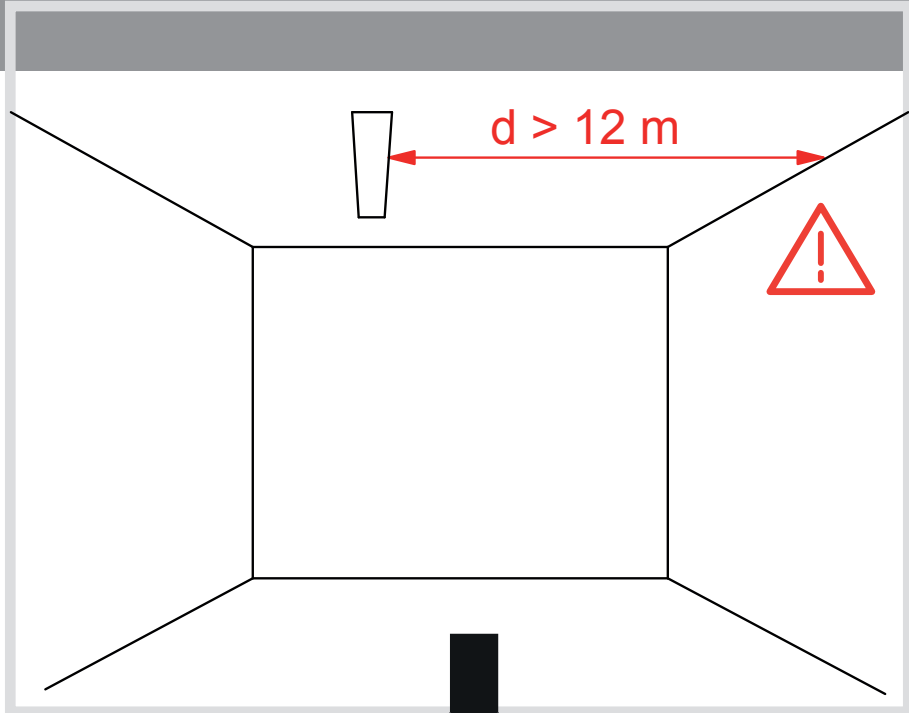


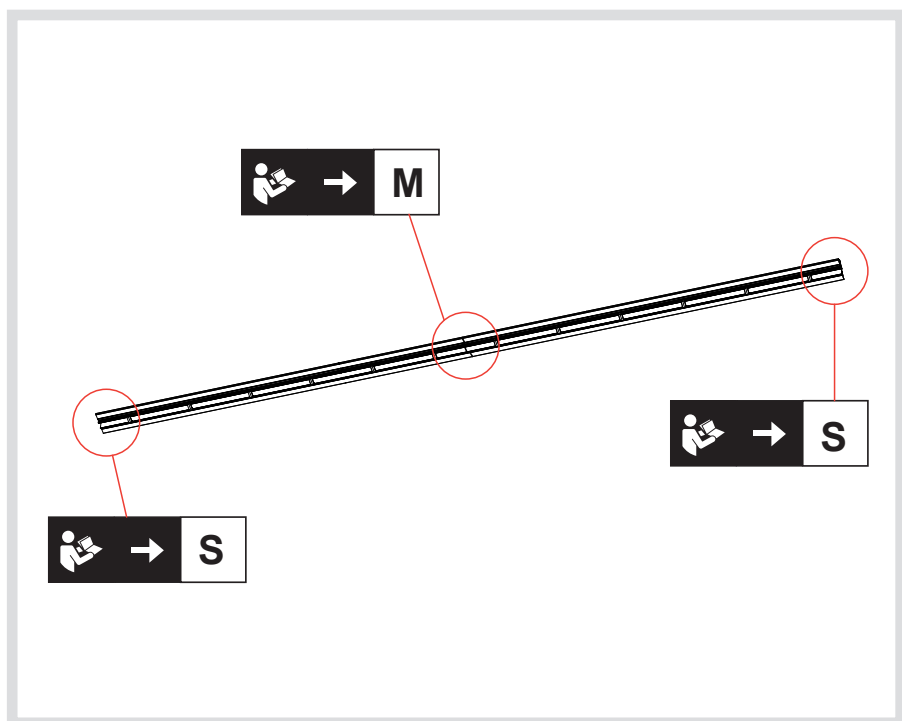





S

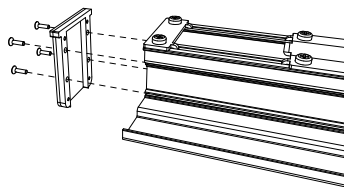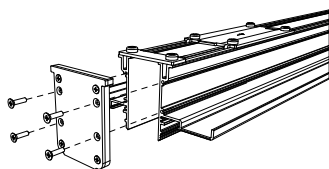



M

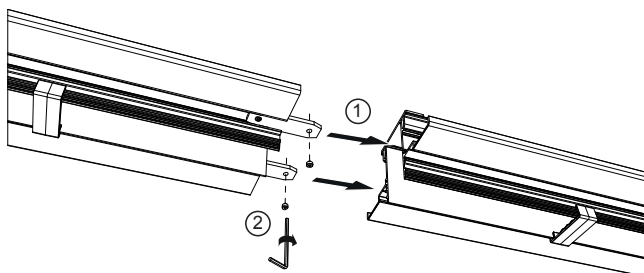


i

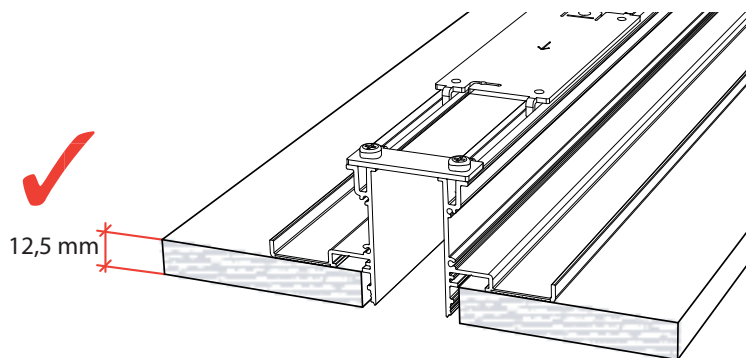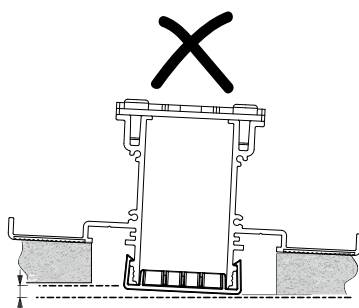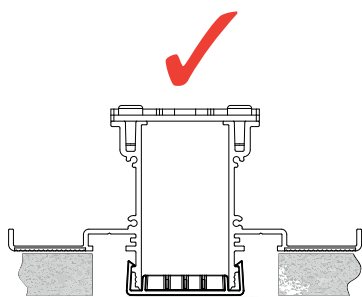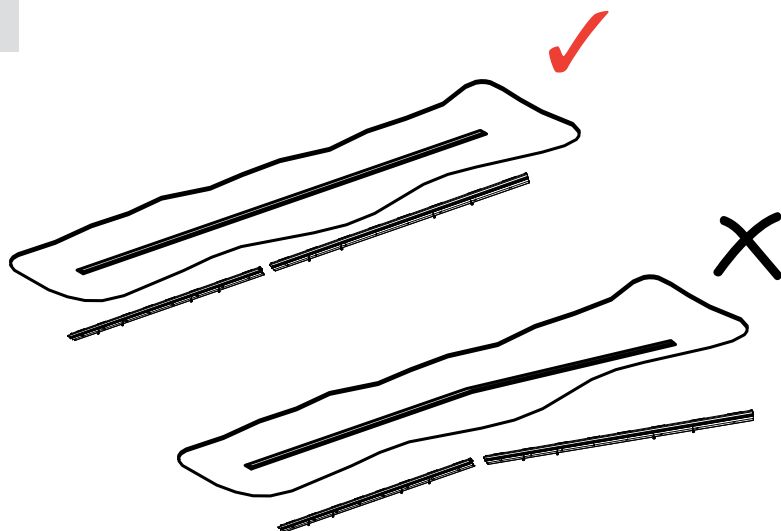


i

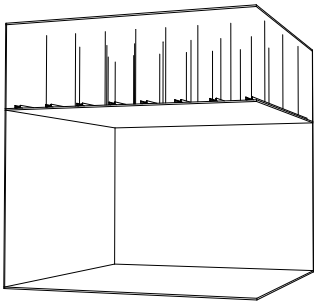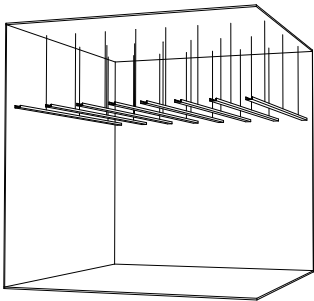


A1

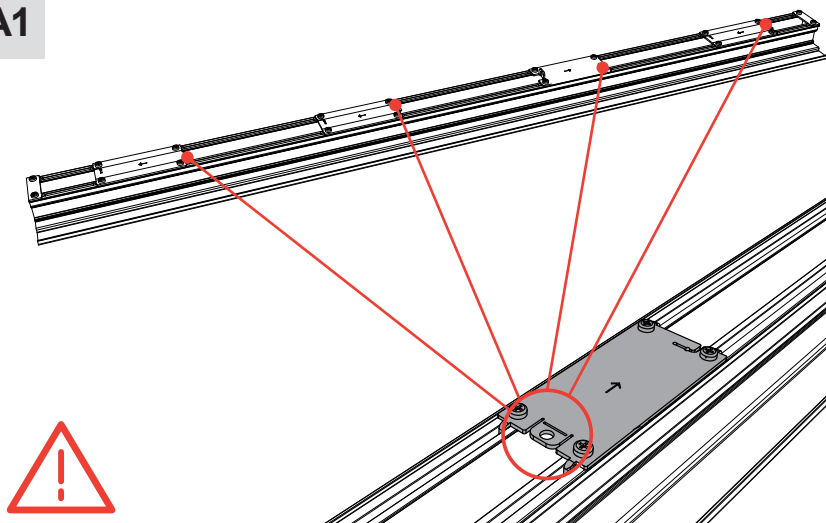



A2

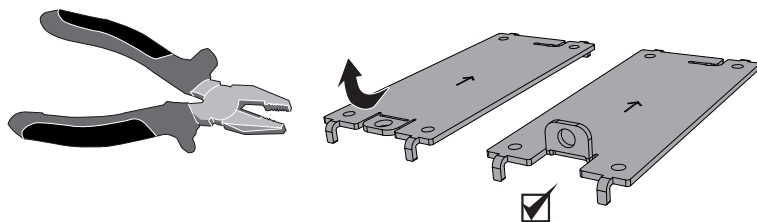

A3

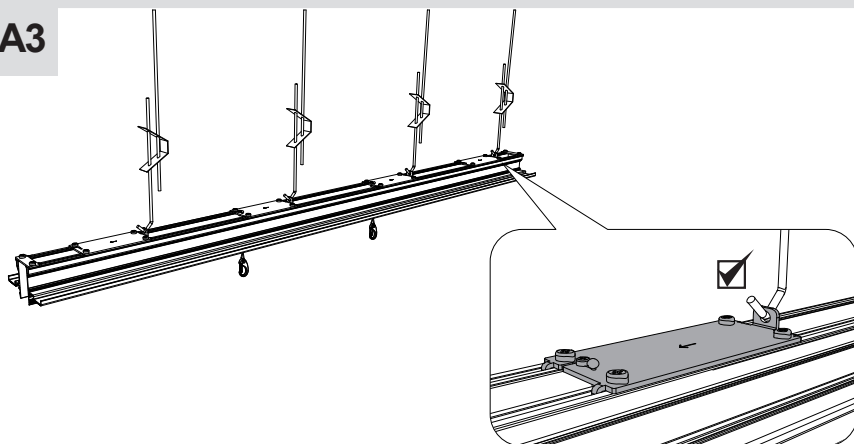


i

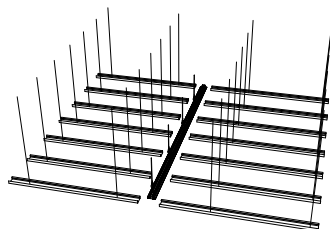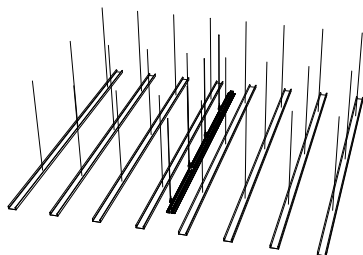


X


X1

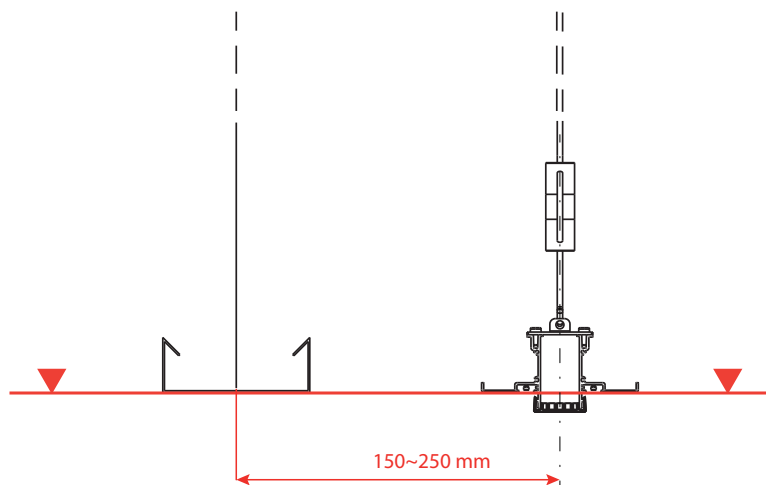

X2

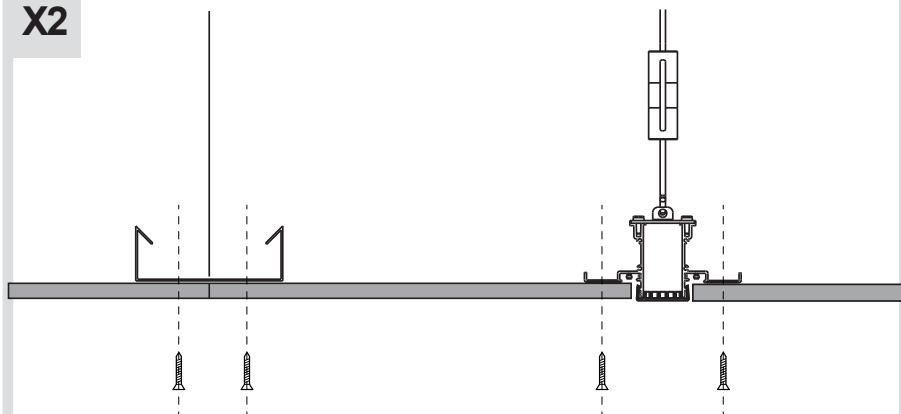


X3

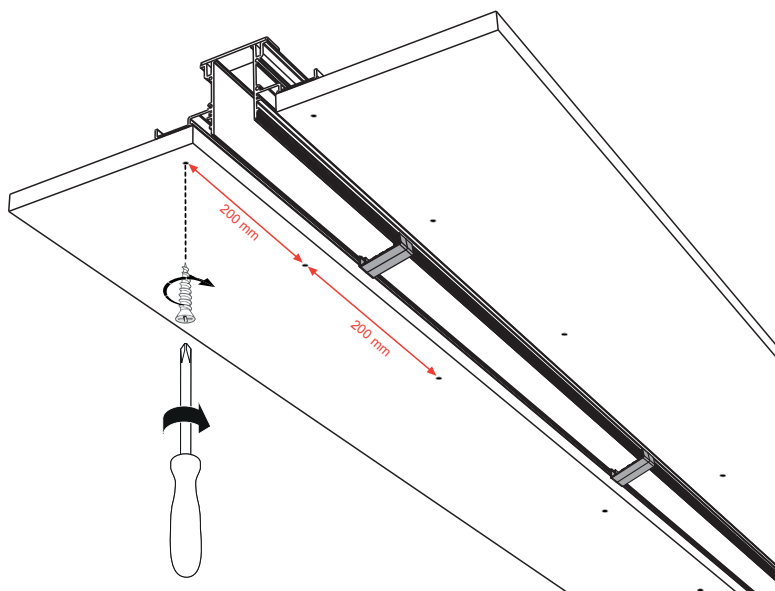


Y


Y1

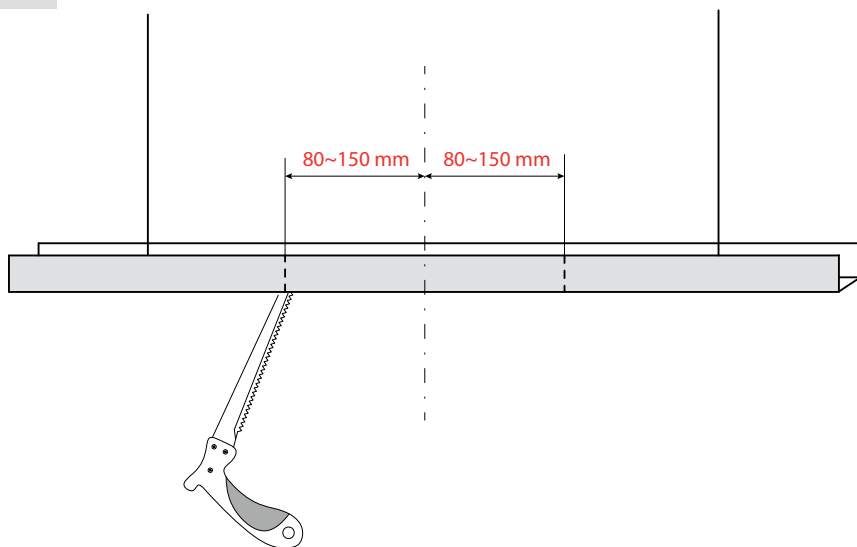


Y2

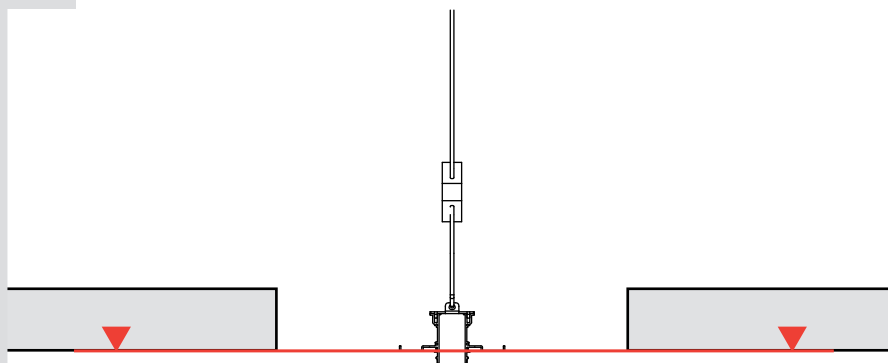

Y3


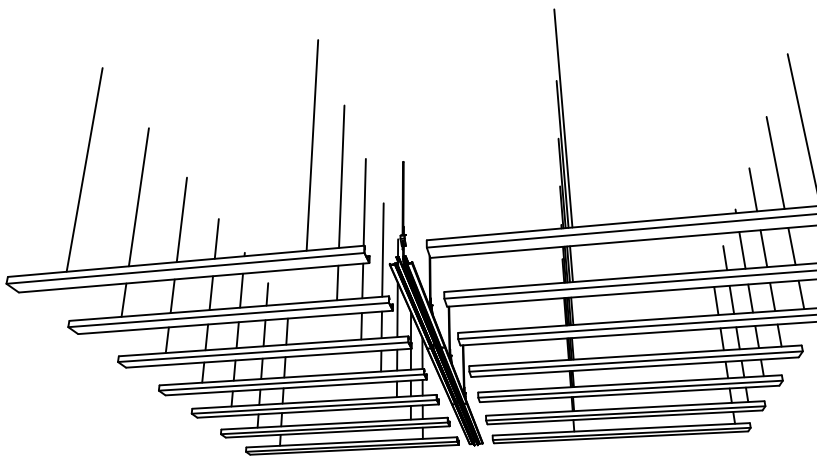


Y4



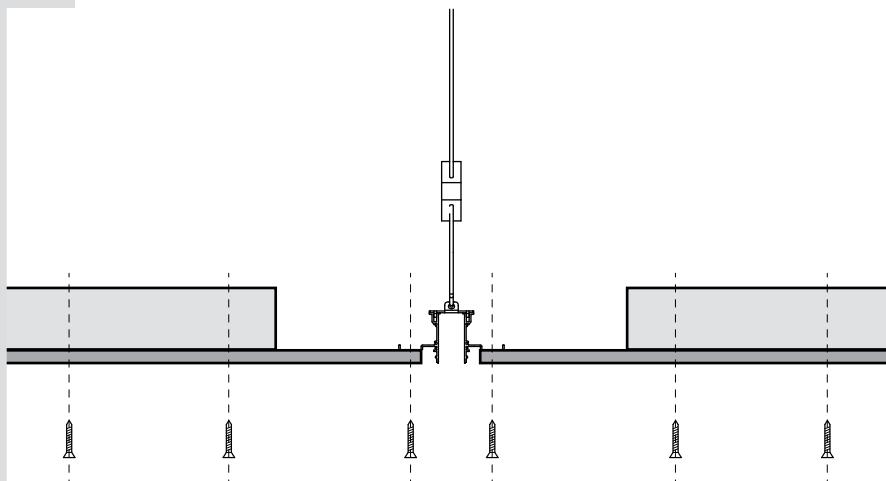


Y5

This diagram illustrates the final step of the Y5 roof installation. It shows a cross-section of the roof structure with the solar panel mounted on the Y5 rail. A screwdriver is shown at the bottom, indicating the final tightening of the screw. Red arrows and text indicate the 200 mm spacing between the mounting points. A checkmark icon in the bottom left corner signifies the completion of the installation.

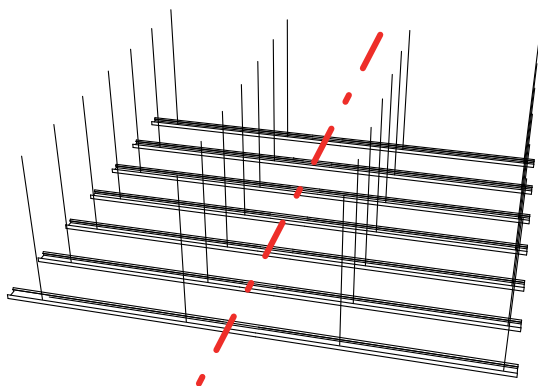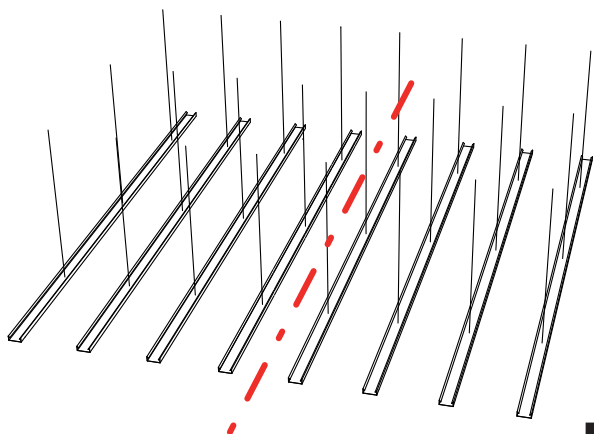


i

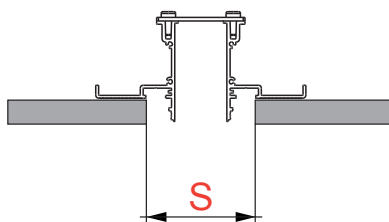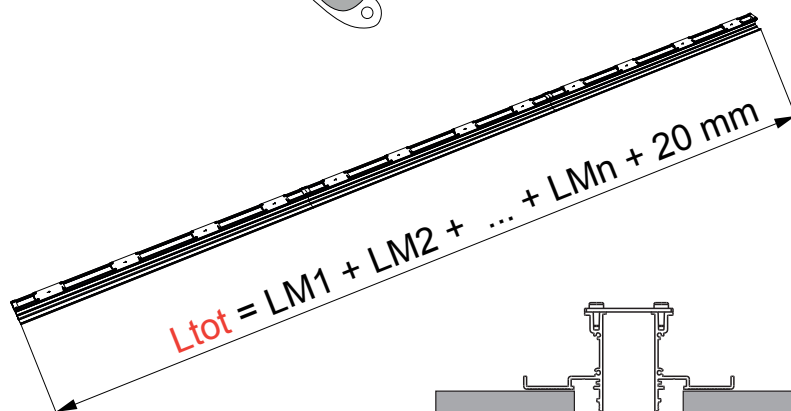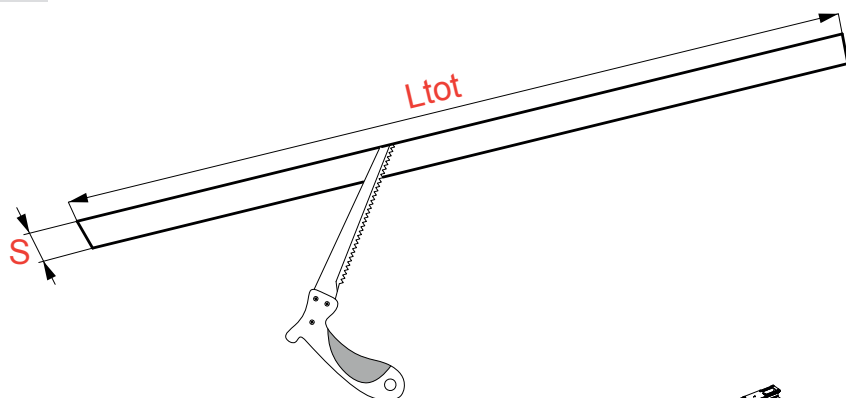


$$L_{tot} = LM1 + LM2 + \dots + LMn + 20 \text{ mm}$$

$$S = 60 \text{ mm}$$

J1

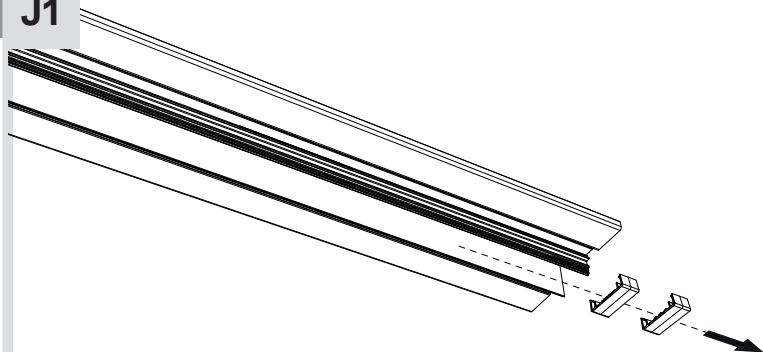

J2


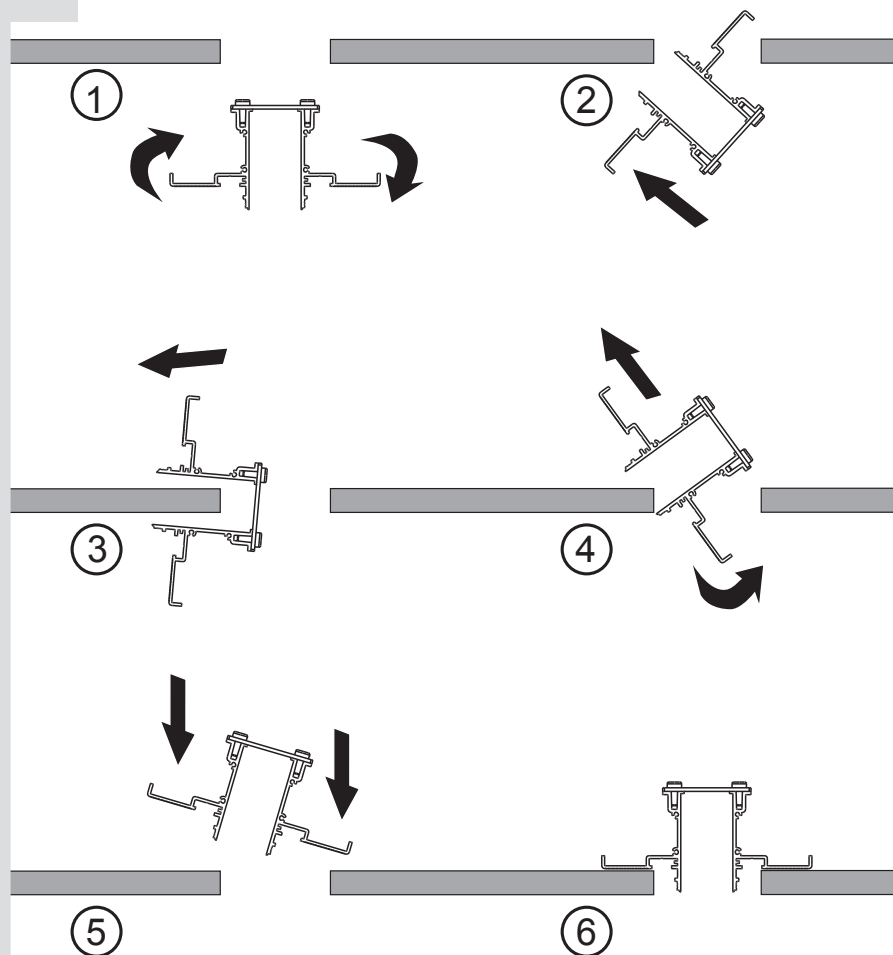


J3


Diagram J3 illustrates the installation of the roof panel. A screwdriver is shown at the bottom left, indicating the location of the fastener. Red arrows indicate a 200 mm distance from the edge of the roof panel to the fastener.

W1


W

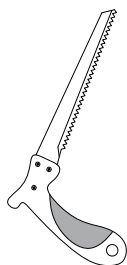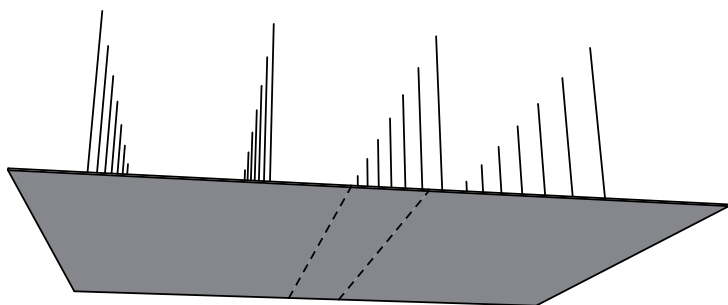



W2

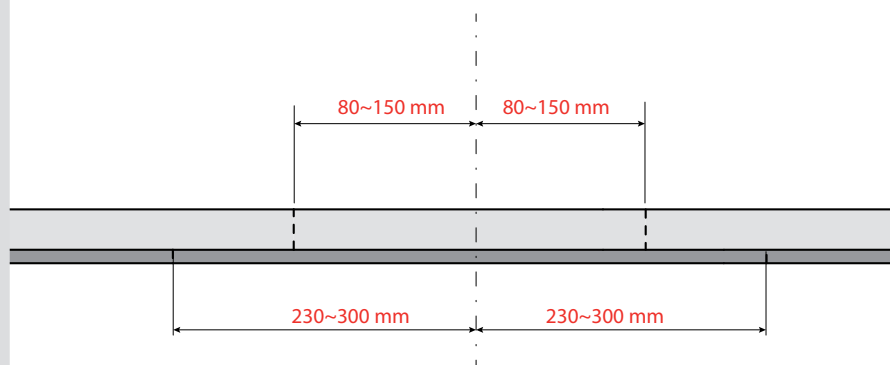



W3

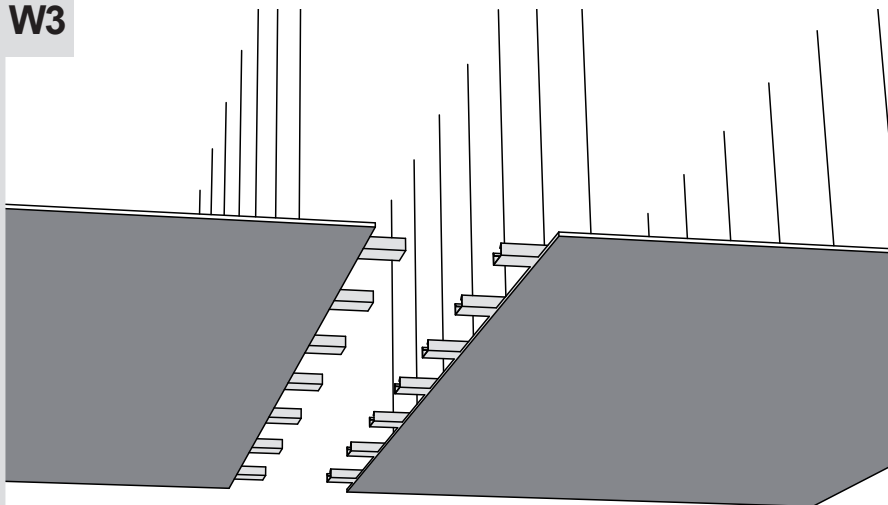



W4

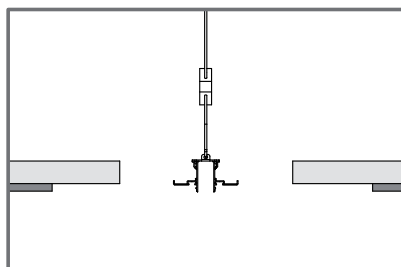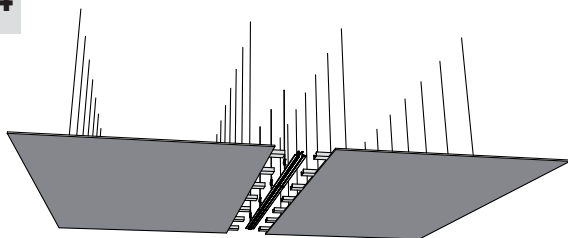



W5

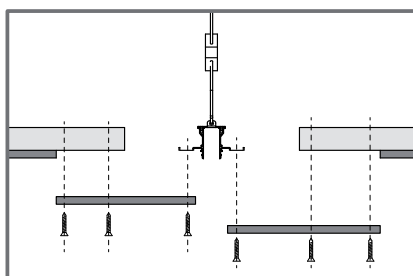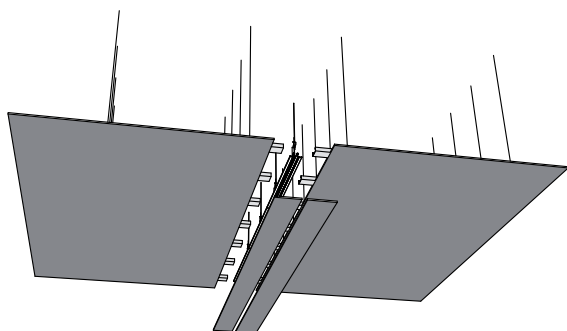


W6

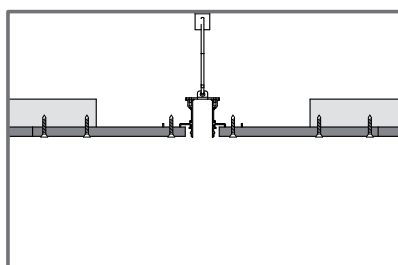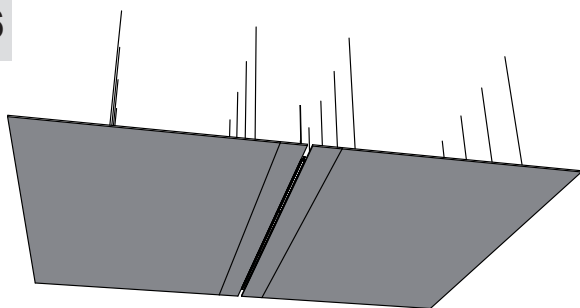


i

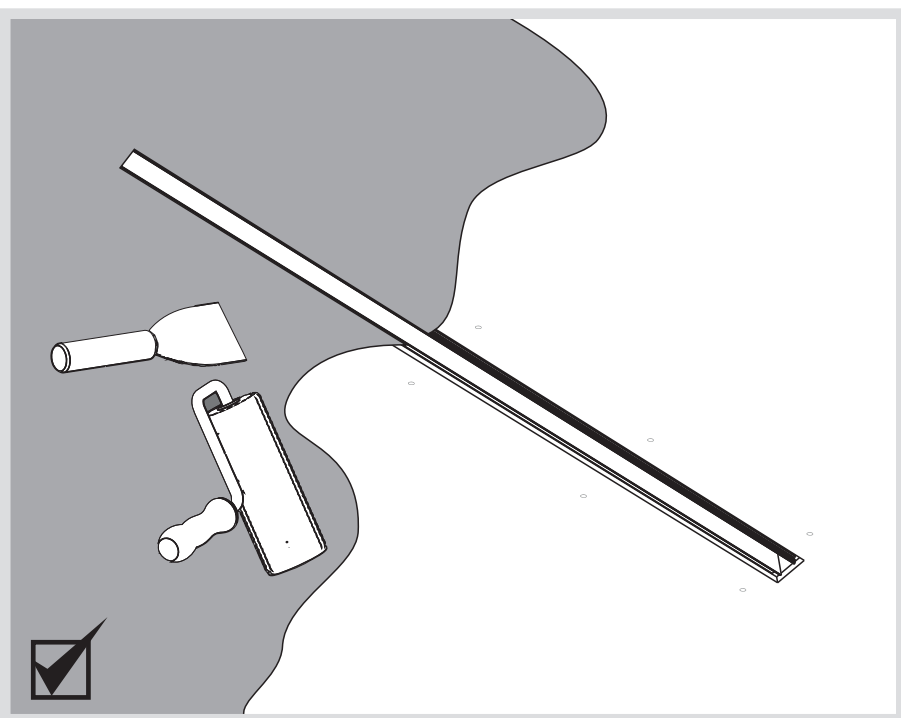
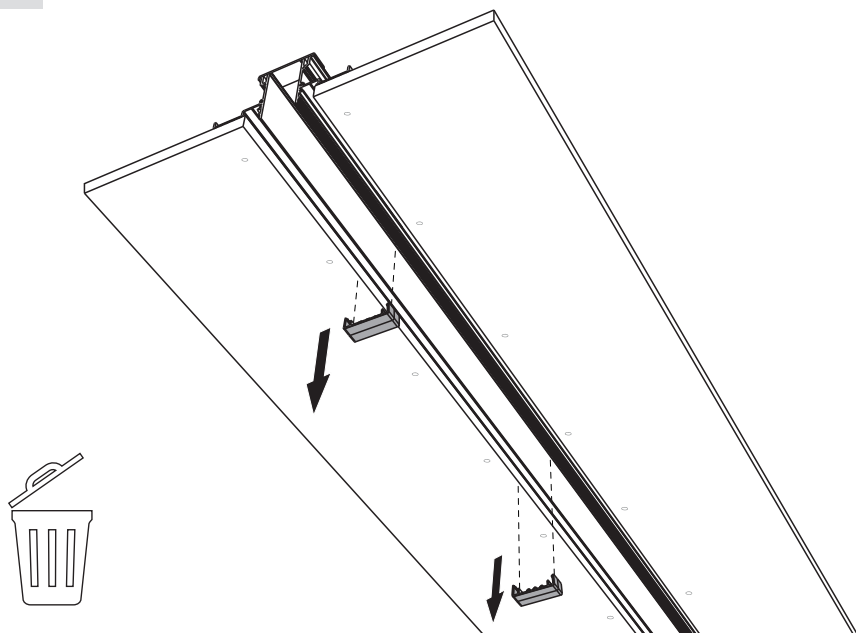


i

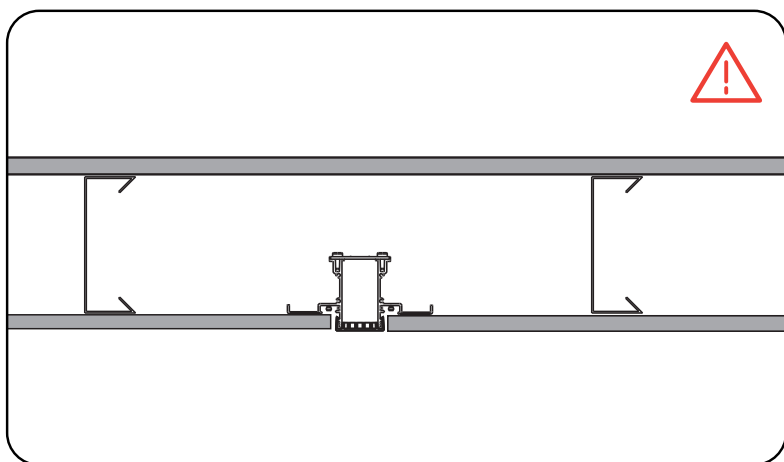


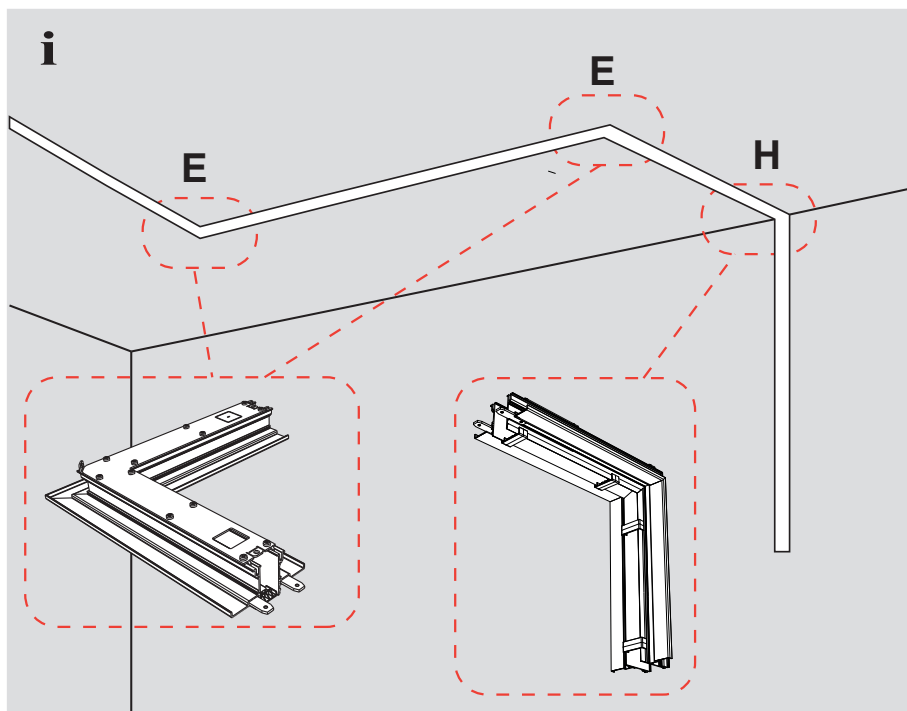


E1

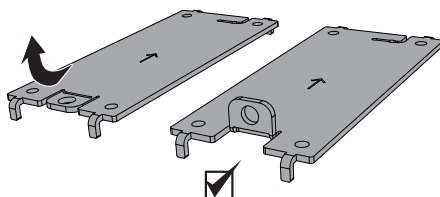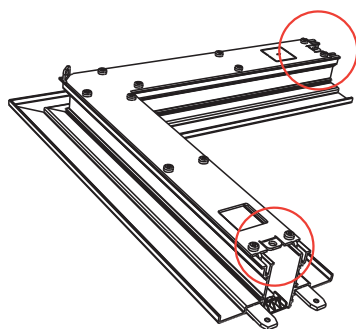



E2

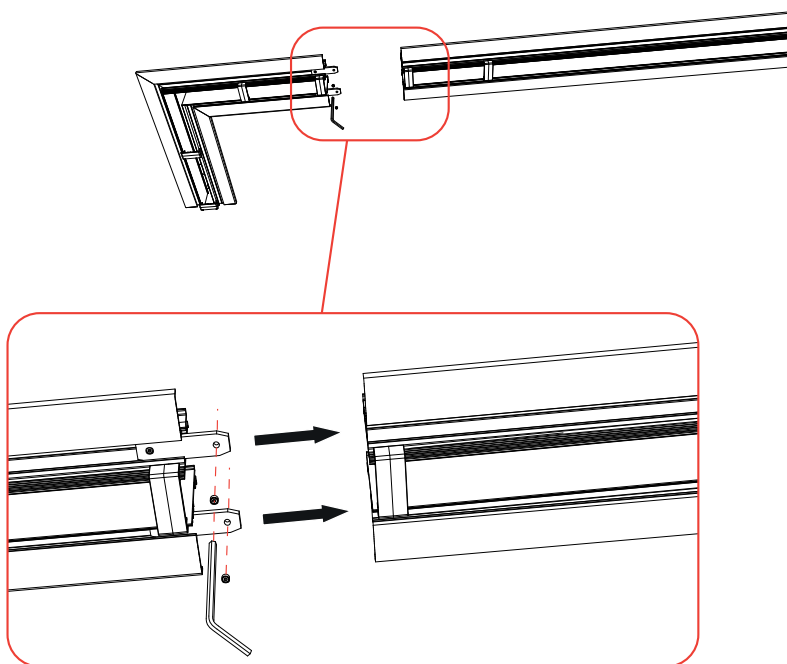




E3

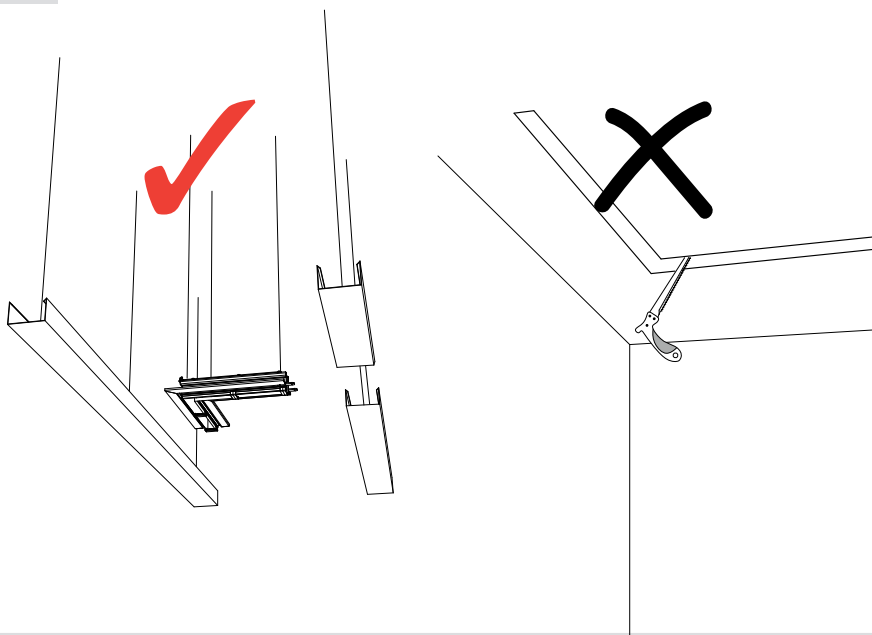



H1

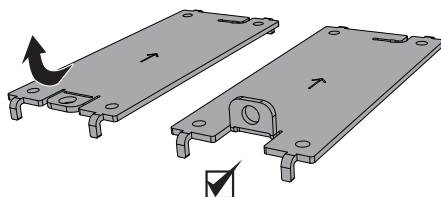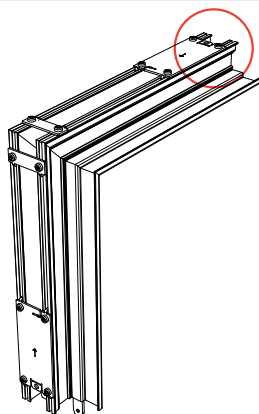


H2

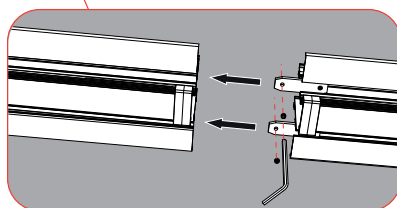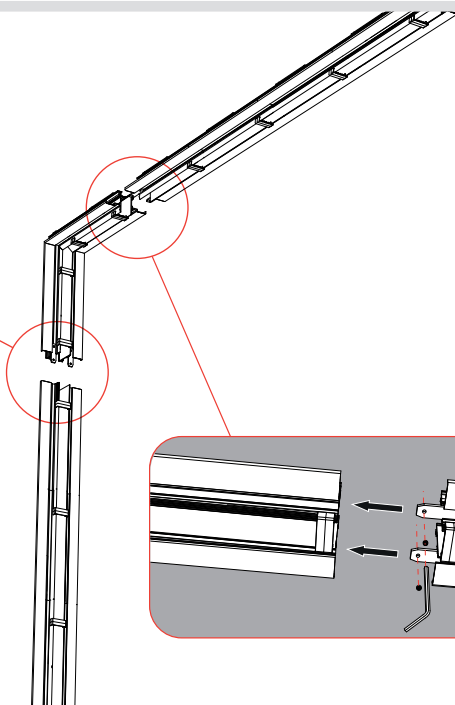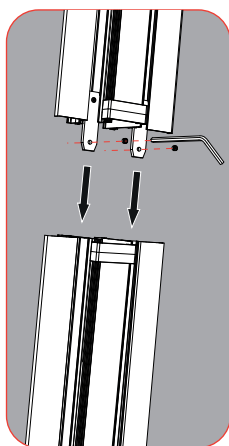


H3

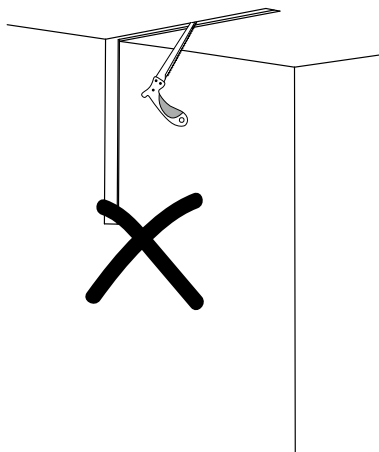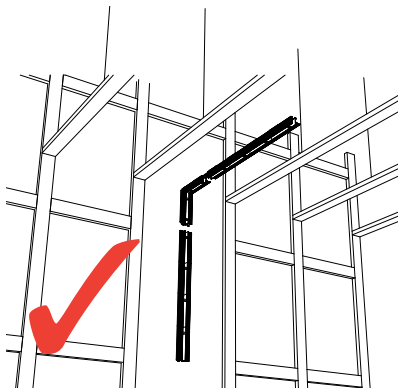



1

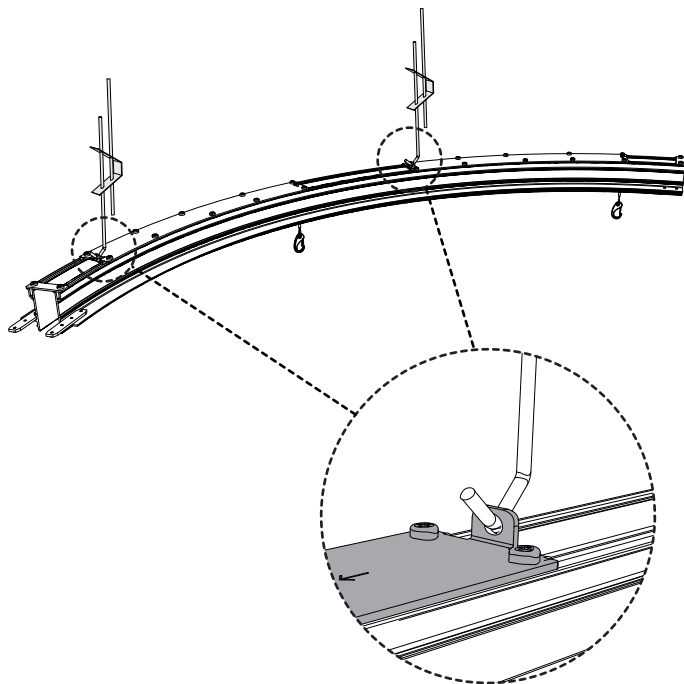



2

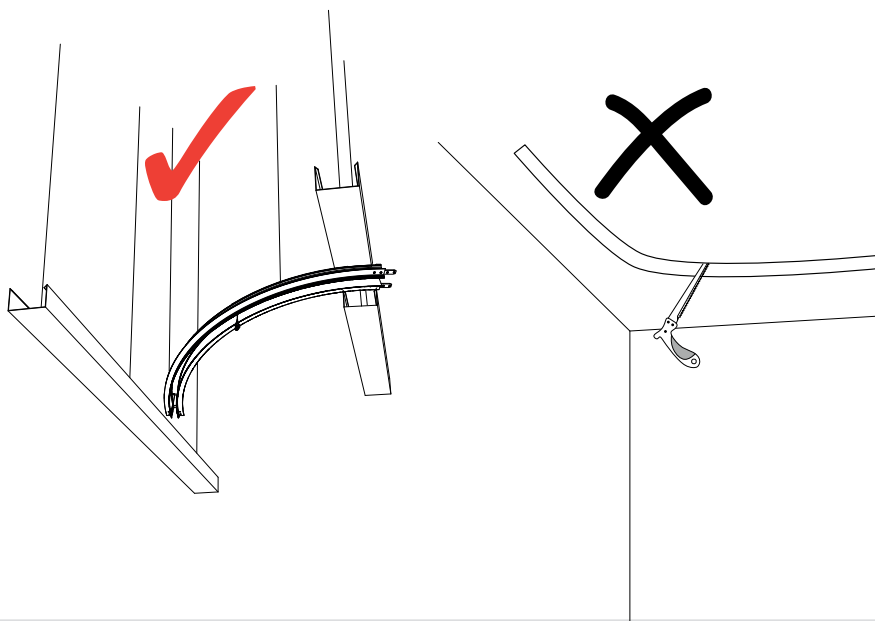


3

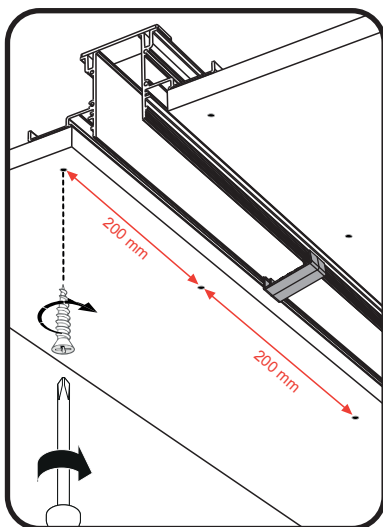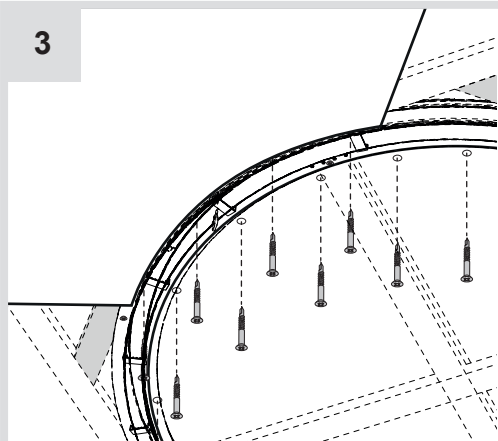

4

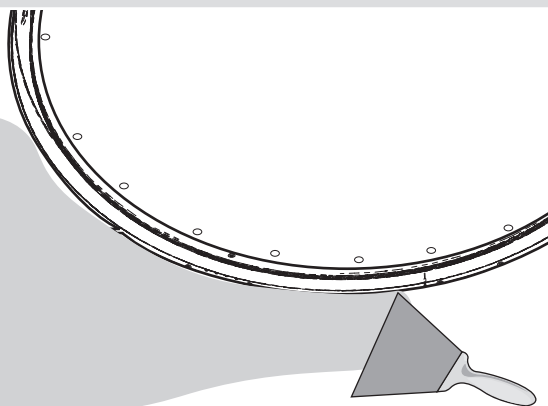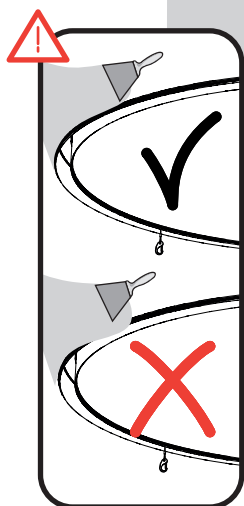

Artemide®



Artemide

via Bergamo, 18
20010 Pregnana M.se (MI)
ITALIA

tel. +39 02 935 181
fax +39 02 935 90 254
fax +39 02 935 90 496

www.artemide.com

VAT IT00846890150

cod. Y513001070A